



# ELECTROGASM



## Instruction Manual

## Precautions

**Read the manual thoroughly before using the product**

- **The device should NOT be used in the following cases: tuberculosis, benign and malignant tumors, hemorrhages, inflammations of the skin, phlebitis and thrombosis, open and fresh wounds, bruises, broken skin or varicose veins or undetermined calf pain or joint pain, unless directed by a physician**
- **Pregnant women should avoid using this device.**

## Warning

- **Stop using it and consult your physician when unpleasant feeling occurs in the use.**
- **Do not apply the device in your mouth, over the head, heart or on any damaged skin areas.**
- **Shift all controls to the off positions before adjust the positions of the massage pads.**
- **Do not put the massage pads on necklaces, rings or any other conductive metals.**
- **Contact the franchisers or the authorized service center when any malfunctions happens.**
- **Do not stick the electrodes to each other.**
- **Do not touch the massage pads with hands.**
- **Do not use while driving.**
- **Do not use while bathing or in a shower.**
- **Supervision is necessary when the device is used by, on or near children or disabled persons.**

## Specifications

**Name: Electrogasm**

**Model #: M0176**

**Power Supply: DC 3V / CR2032**

**Output Frequency: 2-100HZ**

**Current Consumption: 25 mA**

**Battery Life: 48 Hours on a average**

**Parts Include: 1 Controller, 1 Massage Pad, 2 Batteries, and 1 Manual**

## Introduction

Rather than rub those pleasure centers from the outside, the Electrogasm sends small current right through the skin, directly stimulating you. Unlike the electric current that most people are familiar with, the current from our toys is unique, it stimulates the nerves, creating what can be very pleasant sensations. Essentially, it makes you vibrate from the inside. Not only can this be incredibly arousing, but many users have been able to achieve hands free orgasms.

You have a choice of 8 intensity levels to choose from. The Electrogasm can be worn discretely under clothing providing you with your own dirty little secret. The butterfly pad measures 4" in length and 2" in height. Additional adhesive pads can be ordered separately. Let the Electrogasm bring you to the height of pleasure!

Electrogasm device is such a creative device that it implements the above idea. Its beautiful shape and the portability design definitely get more favor from its users.

## Function and features


- Helps blood circulation flow to your most intimate parts.
- 10 Levels of intensity
- Automatically turn off after twelve minutes of operation
- 6 mode options from "A" to "F" with LED display

## Operating Instructions


### Startup




1. Ensure the connection

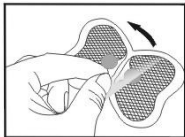

2. Remove the plastic cover

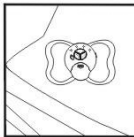

3. Apply to the desired area

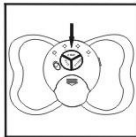

4. Power on the unit

**\*Please keep the plastic cover on the back of Electrogasm after use.**


## Select your preferred massage Mode

There are 6 different modes

- **Mode A - Tapping.**
- **Mode B - Rhythmical Kneading.**
- **Mode C - Deep Kneading.**
- **Mode D - Pressing.**
- **Mode E - Continuous Pressing.**

## Stand - by and Working Status

Every mode has “Stand-by Status” and “Working Status” Stand-by status means the device is ready to start. Working Status means the device is working.

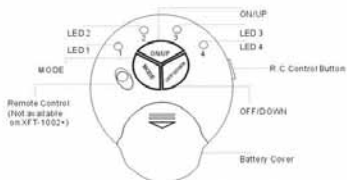

## Basic Operations

- 1. If the device is used for the first time, remove the battery case cover, insert the battery into the case with the “+” polarity facing up, then close the battery cover.**
- 2. Clean the area where the massage pads will be attached.**
- 3. Remove the transparent plastic pad protector and place it in the box for later use.**
- 4. Attach the device to the area to be stimulated.**
- 5. Press the “ON/UP” button to turn on the power, it is defaulted as the stand-by status of Mode A.**
- 6. Press the “ON/UP” button again, the stand-by status is switched to working status, and the strength is still at level “one”, each press on “ON/UP” button brings the strength to next higher level, until level “ten” is reached.**

**7. Each press on “OFF/DOWN” button brings to the next lower level, until stand-by status is reached. At the stand-by status, one more press on the “OFF/DOWN” button turns the device off/.**

**8. When the device is turned off a certain mode, the mode is saved for future use.**

### **Change the Modes**

**1. Press “MODE” button once, the mode is switched from current one to the next mode sequentially Say, if the current mode is mode “F”, then the next mode is Mode “A”.**

**2. Mode change won't affect the stand-by status, working status, and the strength as well.**

## **LED Display**

### **1. Stand-by Status:**

**ˆ LED ON, • LED OFF**

- Mode A - LED1 (ˆ) + LED2 (•) + LED3 (•) + LED4 (•)**
- Mode B - LED1 (•) + LED 2 (ˆ) + LED3 (•) + LED4(•)**
- Mode C - LED1 (ˆ) + LED 2 (ˆ) + LED3 (•) + LED4(•)**
- Mode D - LED1 (•) + LED 2 (•) + LED3 (ˆ) + LED4(•)**
- Mode E - LED1 (•) + LED 2 (•) + LED3 (•) + LED4(ˆ)**
- Mode F - LED1 (•) + LED 2 (•) + LED3 (ˆ) + LED4(ˆ)**

**Note: The power LED will be on when the battery is insered, in this case press “OFF/ DOWN” button to turn off the power.**

### **2. Working Status:**


**ˆ LED FLASH, • LED OFF**

- Mode A - LED1 (ˆ) + LED2 (•) + LED3 (•)+ LED4 (•)**
- Mode B - LED1 (•) + LED 2 (ˆ) + LED3 (•) + LED4(•)**
- Mode C - LED1 (ˆ) + LED 2 (ˆ) + LED3 (•) + LED4(•)**
- Mode D - LED1 (•) + LED 2 (•) + LED3 (ˆ) + LED4(•)**
- Mode E - LED1 (•) + LED 2 (•) + LED3 (•) + LED4(ˆ)**
- Mode F - LED1 (•) + LED 2 (•) + LED3 (ˆ) + LED4(ˆ)**

**• Enjoy It!**

## **Maintenance**

- **Electrogasm is designed for sexual use, and is virtually maintenance - free. No lubrication are needed to clean the head and body, use a damp cloth only, do not use any strong chemical cleaners such as Benzine or Alcohol.**
- **Store the massage in a safe place away from sharp objects.**

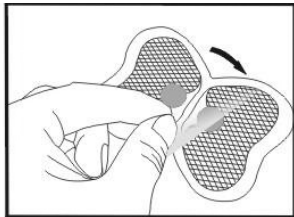

**Please put the ElectroGasm back to the plastic cover after use.**

## **User Agreement:**

**By using this product, the purchaser and any recipient user fully acknowledges and accepts the possible associated risks involved with using this product. The purchaser and any recipient user has read and understands all warnings and operating procedures prior to usage.**

## **Limitation Of Liability:**

**The purchaser and/or recipient user is solely responsible for any possible risks, liability for loss, injury incurred, property damage, etc. as a result of use or misuse of the ElectroGasm or Zeus products. The manufacturer, Zeus, and any of their consultants, employees, related companies, affiliates, and agents are in no event responsible or liable to the purchaser or user claiming direct, indirect, incidental, consequential, or any other damage under potential theory of law as a result of use or misuse, even though the manufacturer is aware of such possible risks and damages. Please read all instructions and warnings before usingt to avoid hazardous risks.**

## **Indemnity:**

**The purchaser and/ or user agrees to indemnify, and will hold the manufacturer harmless of any and all claims, damages, causes of actions, demands, and any cost or expenses incurred (including attorney's fee's) that have arisen as a result of use or misuse.**

## **Binding Arbitration:**

**All disputes relating to this agreement will be subject to final and binding arbitration. The purchaser and/or user agrees that any claim or dispute that is to be filed as a result of the use or misuse is the ElectroGasm will be filed with an objective, independent arbitrator. The purchaser and/or user fully agrees that binding arbitration is the only action made to resolve a claim. The purchaser and/or user waives their right to file a lawsuit in any civil court seeking remedies from the manufacturer or associated dealer, except in the event of enforcing a legally binding arbitrational enforcement.**

## Trouble Shooting Chart

<b>Problems</b>	<b>Possible Causes</b>	<b>Solutions</b>
<b>No Pulse</b>	<b>1. No Battery installed 2. Wrong Battery polarity 3. Low battery capacity</b>	<b>1. Insert Battery 2. Follow the instructions for the polarity check 3. Change new battery</b>
<b>LED not Function Properly</b>	<b>1. Circuit not working properly. 2. Low battery capacity</b>	<b>1. Remove the battery for 1 minute, then re-install it. 2. Change new battery.</b>
<b>Weak Pulse</b>	<b>1. Low intensity</b>	<b>1. Increase the intensity 2. If above 1 does not work, change the battery.</b>
<b>Red skin after use</b>	<b>1. Over Use 2. Loose attachment of a massage pad on the skin. 3. A damaged, polluted or dried pad.</b>	<b>1. Reduce the massage time 2. A tighter attachment 3. Replacement or water cleaning</b>
<b>Loose attachment of the pads</b>	<b>1. Poor maintenance for the pads 2. The pads has exceeded it average life period</b>	<b>1. Wash the pads gently with clean water and dry in the shade 2. Replace with new pads.</b>